

Setup Procedure Gravity & Siphon Feed Systems

Ш	Prepare the coating according to manufacturer's specifications
	Fill the paint cup with coating using a funnel to minimize potential waste Siphon Feed: secure the paint cup to underside of the spray gun Gravity Feed: replace and tighten the lid
	Select appropriate fluid nozzle and air cap combination based on: Type of coating Viscosity of coating Shape of parts to be sprayed
	Open the fluid adjustment valve completely
	Set the air pressure to around 10 PSI
	Spray a test pattern onto backdrop paper or cardboard at the recommended standoff distance
	Observe the degree of atomization Increase the air pressure in small increments until the desired degree of atomization is achieved
	If the fluid delivery rate is too high ☐ Turn the fluid adjustment valve clockwise ☐ Replace the fluid nozzle with one that has a smaller orifice